


# Power Prime™

Draws the Air Lock from Your Pump System for Instantaneous Priming

- Pumps will not Self Prime if they can not easily expel the air inside them.
- Any back pressure in the discharge line delays or prevents self priming.
- A simple priming hose from the quick connect to the solution tank works well for priming.
- A simple priming hose from the quick connect to the vacuum tank inlet with the vac motors running works even better.
- The Power Prime Valve is like a permanent priming hose connected to the vacuum tank. Plugging the vacuum inlet to the vacuum tank will cause higher vacuum, for even faster priming.

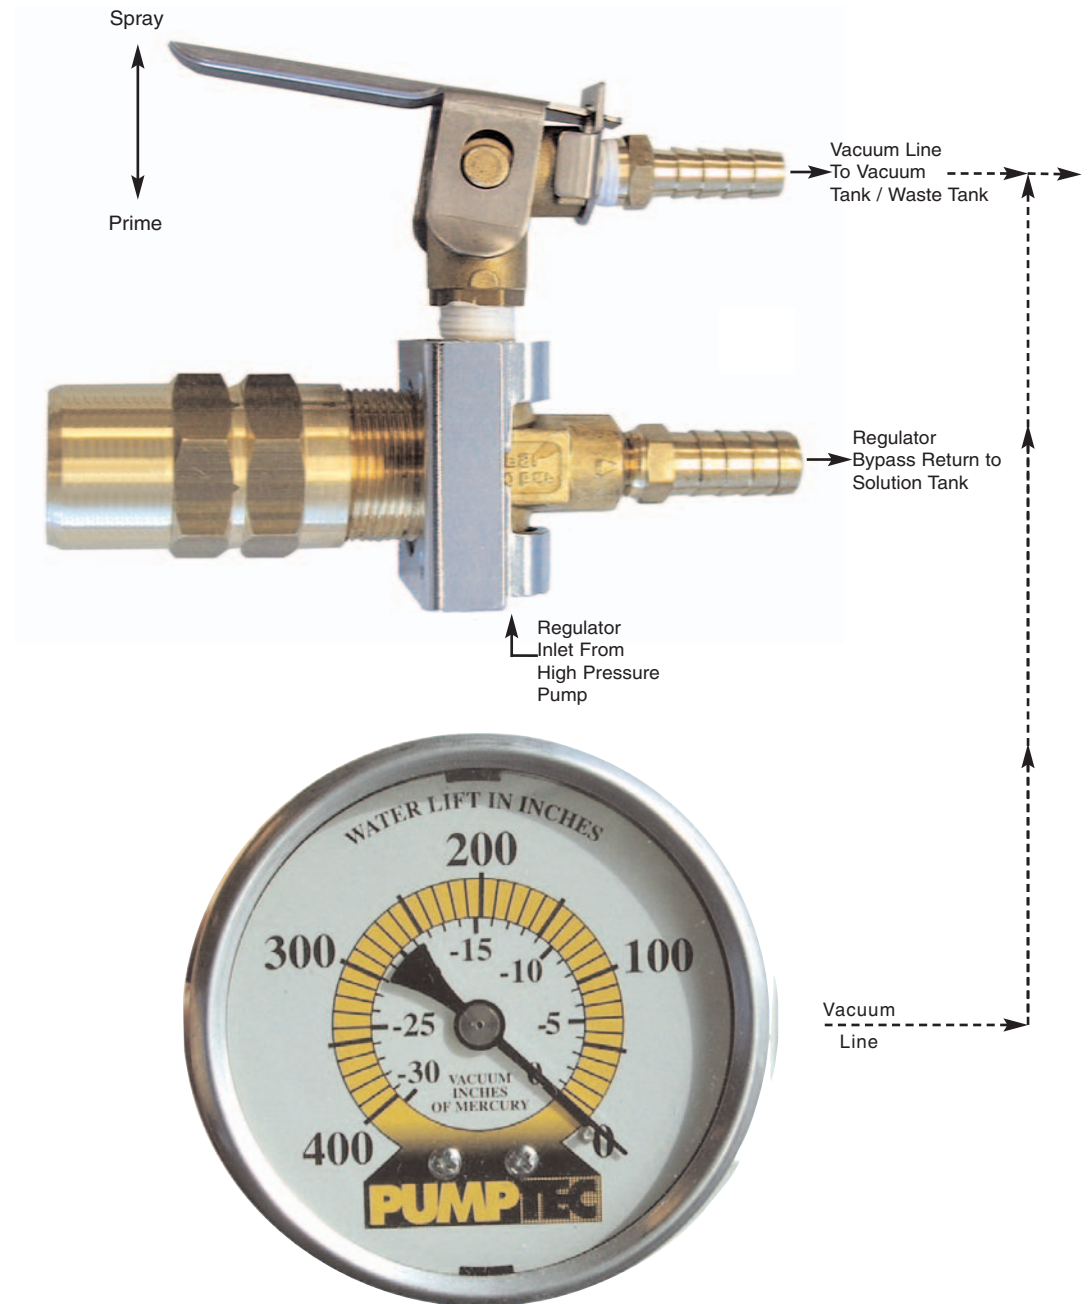

## Vacuum Gauge

**Now You Can ADD a Vacuum Gauge to your Portable!**