

Step 5

Place the two clear lines from your Decker into your 5 gallon bucket of solution.

Step 6

Give your priming bulb 3 firm squeezes to force prime your Decker unit. You will need to do this step each time you start your Decker unit.



Finish

You are now ready to go to work. Plug your Decker unit into a standard 120 volt circuit and turn the switch into the on position. **NOTE:** Your cord on your Decker unit is fitted with a GFCI and may need reset at initial startup.



Pumptec, Inc.
700 McKinley St. NW
Anoka, MN 55303
ph: 763-433-0303
www.pumptec.com



120V Decker Installation Instructions


Congratulations on your purchase of the most innovative deck spraying unit on the market. The Decker unit is supplied with two parts kits (inlet kit and pressure kit). Please follow the instructions below to ensure proper installation of supplied parts.

Tools Needed: Flat head screw driver 5/8" wrench
Teflon Tape 3/4" wrench

Assembly Time: 20 minutes

Kit 1 - Inlet Assembly Kit

Qty	Description
1	Primer bulb 3/8" barb x 3/8" barb
1	Hose barb 3/8" mpt x 3/8" barb brass
1	Hose barb 3/8" mpt x 3/8" barb nylon
1	Mushroom strainer
1	Quick connect 1/4" fpt x 1/4" socket
2	18" x 3/8" ID poly spring hose
3	Stainless Steel hose clamps

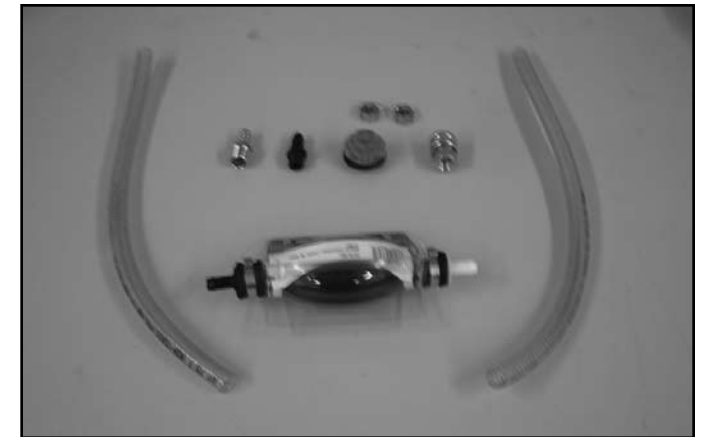

Step 1

Install the 2-18" x 3/8" ID hoses on to the primer bulb with 1 Stainless Steel hose clamp on each hose and tighten clamps using a flat head screwdriver.




Step 2

Insert the hose barb 3/8" mpt x 3/8" barb into the 18" hose on the pump side of the primer bulb with the Stainless Steel clamp and tighten with a flat head screwdriver. **NOTE:** The primer bulb has an arrow that points to the pump side of the assembly

Step 3

Apply Teflon Tape to the threads of the nylon hose barb and install the quick connect 1/4" ftp x 1/4" socket to the hose barb threads. Use a 5/8" wrench to firmly tighten the quick connect on to the hose barb.
CAUTION: Excessive Teflon tape or over tightening the fitting could cause cross threading or breakage in the nylon fitting.

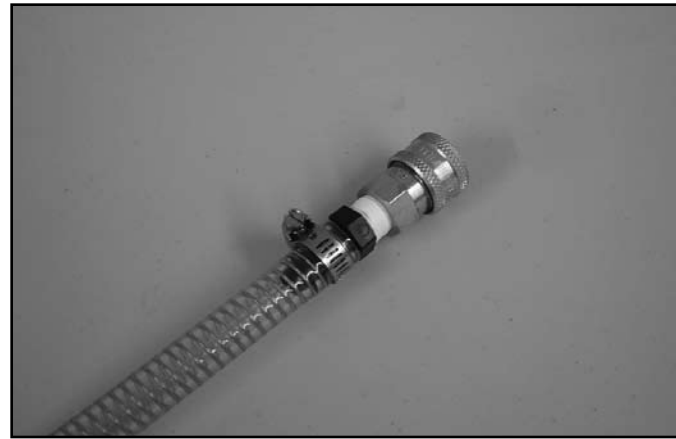

Step 4

Insert the 3/8" mpt x 3/8" barb brass into the 18" hose installed on the solution side of the primer bulb.

Step 5

Thread the mushroom strainer to the 3/8" mpt x 3/8" barb brass fitting installed in step 4. Connect the 1/4" socket to the 1/4" plug on the Decker unit.



Kit 2 - Pressure Kit

Qty	Description
1	Spray Gun
1	Lance
1	Cone nozzle with wing nut
1	50' high pressure hose



Step 1

Thread the straight end of the lance into the 1/4" female outlet on the spray gun.

Step 2

Install the Cone Nozzle with wing nut on to the nozzle end (angled end) of the lance, hand tighten.



Step 3 & 4

Connect the male socket on the end of your 50' spray hose to the female socket on the black hose located on your Decker unit. Connect the female socket on the end of your 50' pressure hose to the male socket located on the clear inlet hose of your Decker.

